

Brewer Chimney Capper fitting instructions

Strap Model

A quick way to stop rain and bird entry to the unused chimney

- Prevents frost damage
- Easy to install
- Maintenance free
- Fits 150-250mm (6-10") internal pot sizes
- Prevents rain and bird entry
- Discourages soot fall
- Powder coated terracotta, black, buff or unpainted
- Easily removed should the chimney be required for use

Important: Only to be fitted to unused chimneys.

To fit the capper:

- Place the capper centrally on the chimney pot.
- 2. Bend the legs down the outside face of the chimney.
- 3. Pass the stainless steel band around the legs.
- 4. Position the band approximately 50mm (2") above the lower edge of the legs.
- 5. Tighten the band with a flat bladed screwdriver, ensuring there is a 5mm (1/4") air gap between the underside of the capper and the top face of the chimney.
- 6. Bend bottom of legs back upwards over band.
- 7. Trim legs if necessary.



