

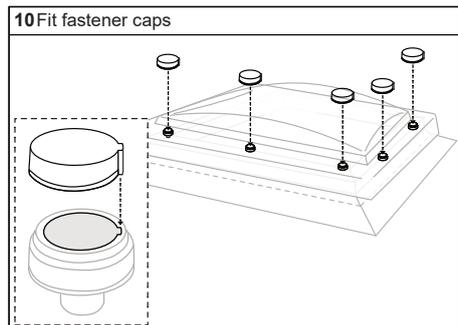
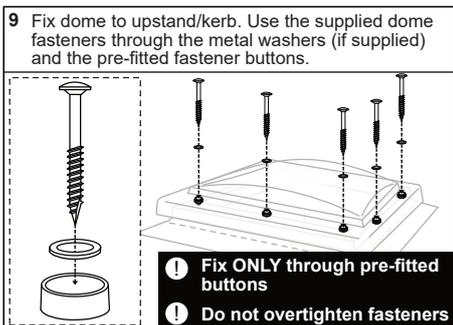
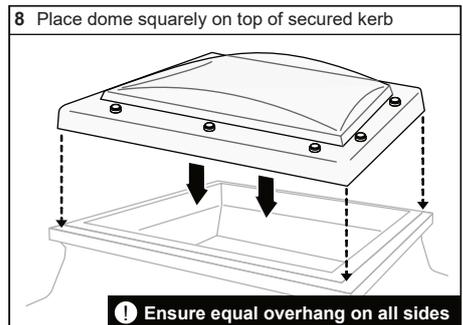
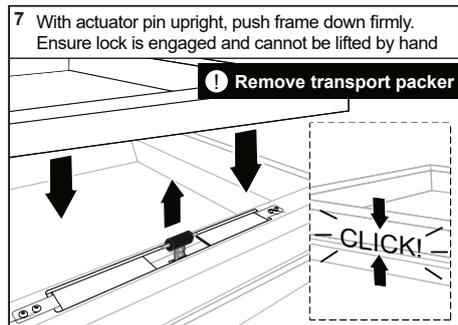
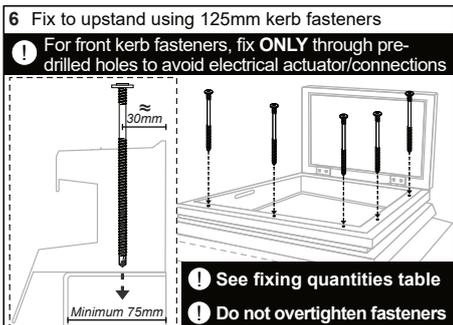
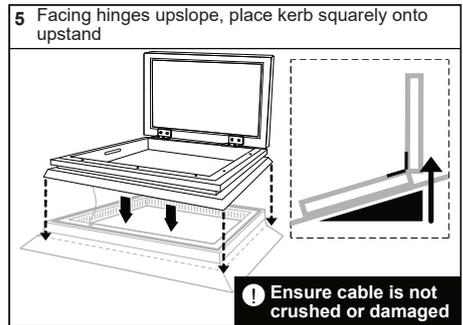
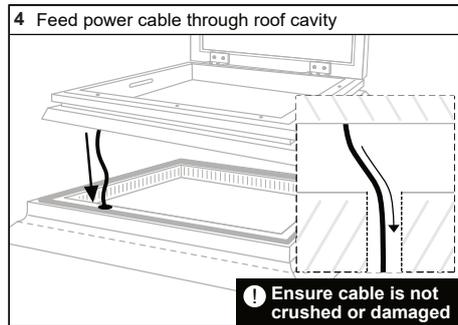
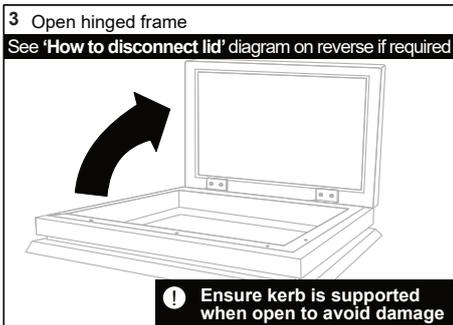
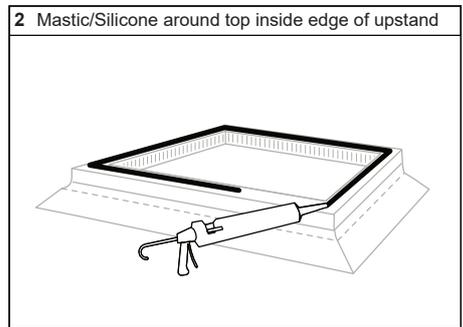


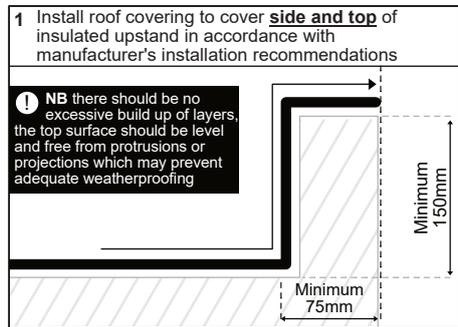

<b>Contents</b>		⚠ Take care when unpacking	Check all correct parts are included and undamaged	Only use fixings supplied	<b>Fixing Quantities</b>	
Outer Dome	Hinged Kerb	Metal Washers (if supplied)	Wall Switch (PCD only)	Switch (centre sprung)	Length of Nominal Dome Side (mm)	Number of fixings per side
Dome Fasteners	Kerb Fastener	Fastener Caps	Remote Control (PCR only)	Remote Control with holder	600, 750	2
Length varies with product type	125mm		Remote Control & Rain Sensor (PCS only)	Remote Control with holder Rain Sensor	900, 1050, 1200	3
					1350, 1500, 1650	4
					1800, 1950	5
					2100, 2250	6
					2400	7

⚠ All Health & Safety Regulations must be followed on site throughout the installation process

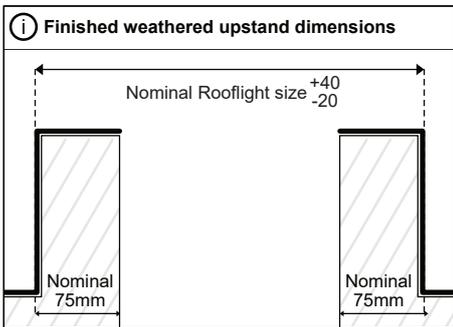

**11 Connect electrics (see diagrams on pages 3 & 4)**

**This should only be completed by a suitably qualified electrician**

⚠ **TECHNICAL SUPPORT:** For any technical information/queries please contact your supplier. The manufacturer operates a policy of continuous product improvement, and reserves the right to alter specifications at any time without notice. Every effort has been taken to ensure all details contained in this document are correct at the time of going to press but this document should be used only as a guide and does not in any way form part of a contract or warranty. It is the customer's responsibility to ensure that the product is suitable for the actual conditions of use, which are beyond the control of the manufacturer.





Contents				Fixing Quantities	
<p>⚠ Take care when unpacking    Check all correct parts are included and undamaged    Only use fixings supplied</p>				Length of Nominal Dome Side (mm)	Number of fixings per side
Outer Dome	Dome Fasteners	Metal Washers (if supplied)	Wall Switch (PCD only)	Switch (centre sprung)	2
150mm/300mm Hinged kerb	Length varies with product type		Remote Control (PCR only)	Remote Control with holder	3
	Kerb Fastener	Fastener Caps	Remote Control & Rain Sensor (PCS only)	Remote Control with holder Rain Sensor	4
	55mm				5
					6
					7

⚠ All Health & Safety Regulations must be followed on site throughout the installation process

**1** Mastic/Silicone around the edge of the roof opening

**2** Feed power cable through roof cavity

⚠ Ensure cable is not crushed or damaged

**3** Facing hinges upslope, place kerb squarely over roof opening

**4** Fix kerb to roof using 55mm kerb fasteners  
Remove and retain label

⚠ See fixing quantities table  
⚠ Do not overtighten fasteners

**5** Install roof covering according to manufacturer's installation recommendations

If required, lightly torch roof covering.

⚠ NEVER apply direct heat or naked flame to the rooflight  
⚠ Fit using instructions on kerb label

**6** Terminate roof covering in accordance with instructions on retained kerb label

**7** Place dome squarely on top of secured kerb

⚠ Ensure equal overhang on all sides

**8** Fix dome to upstand/kerb. Use the supplied dome fasteners through the metal washers (if supplied) and the pre-fitted fastener buttons.

⚠ Fix ONLY through pre-fitted buttons  
⚠ Do not overtighten fasteners

**9** Fit fastener caps

**10** Connect electrics (see diagrams on pages 3 & 4)

**This should only be completed by a suitably qualified electrician**

**How to disconnect lid (if required)**

⚠ **TECHNICAL SUPPORT:** For any technical information/queries please contact your supplier. The manufacturer operates a policy of continuous product improvement, and reserves the right to alter specifications at any time without notice. Every effort has been taken to ensure all details contained in this document are correct at the time of going to press but this document should be used only as a guide and does not in any way form part of a contract or warranty. It is the customer's responsibility to ensure that the product is suitable for the actual conditions of use, which are beyond the control of the manufacturer.







**Connect electrics**

**ⓘ Please note that all wiring and commissioning must be undertaken by a suitably trained and qualified person. The installer must ensure that all wiring runs, cable thickness and earthing etc. meet current regulations.**

*230V (AC) actuators must not be operated by supplying continuous power to the actuator; this will damage the actuator over time and void any warranty.*

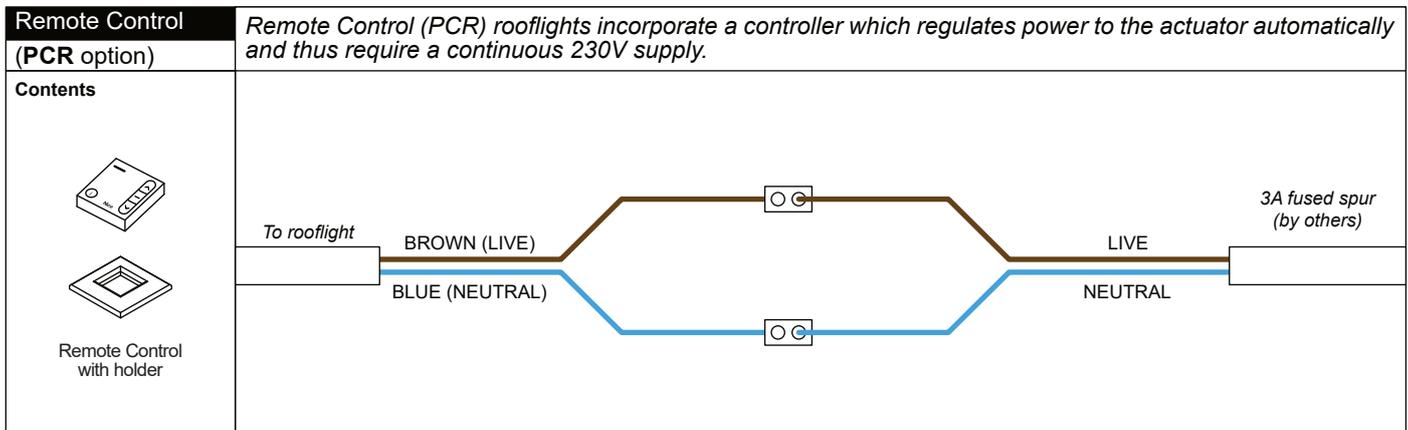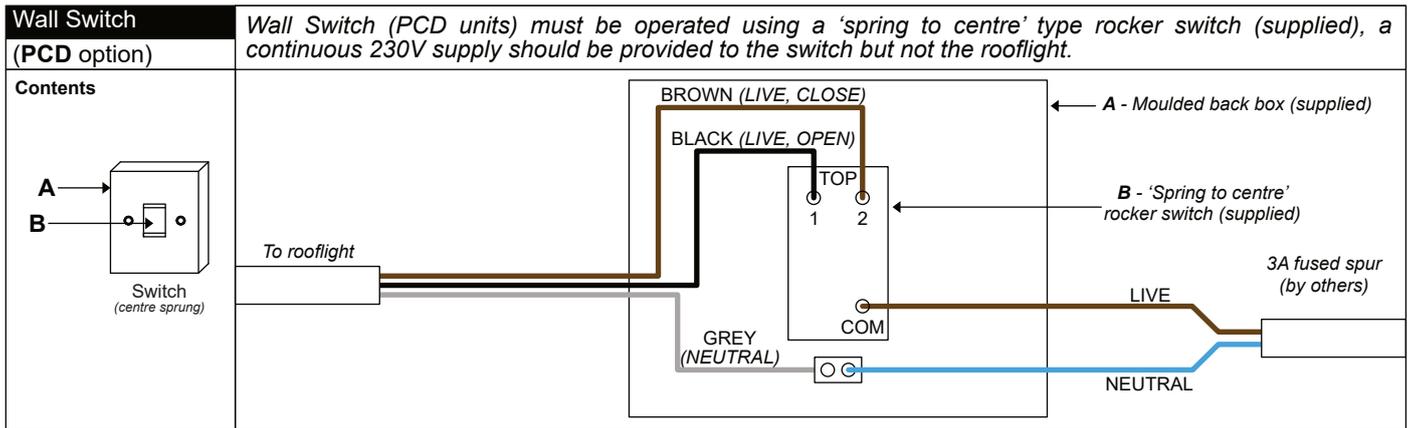



**Remote Control with Rain Sensor (PCS option)**

Remote Control with Rain Sensor (PCS) rooflights incorporate a controller which regulates power to the actuator automatically and thus require a continuous 230V supply. The rain sensor that comes with PCS units requires a continuous 230V supply and **communicates with the rooflight wirelessly (DO NOT WIRE TO ROOFLIGHT).**

**Contents**




Rain Sensor



Remote Control with holder


## ROOFLIGHT

**Rooflight** (do not wire rain sensor to rooflight)

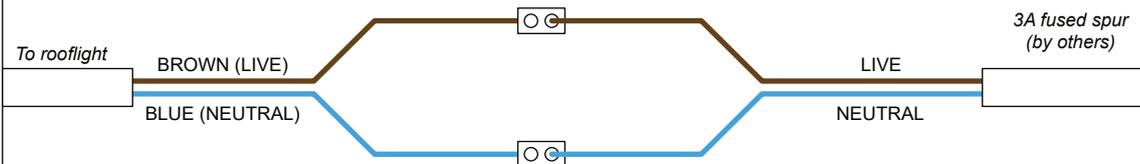


## RAIN SENSOR


**1 - Rain Sensor** Identify suitable location for rain sensor. **Must be positioned somewhere it will be hit by rain**

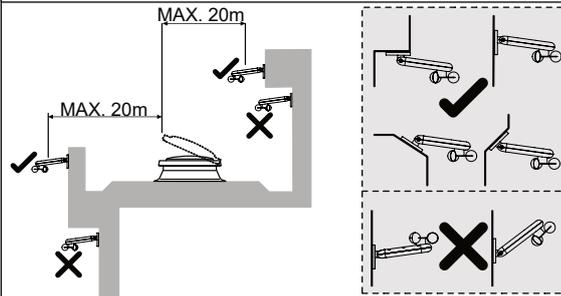


**2** Thread 2 core electrical supply cable (3-5A rated flex) through the wall mounting plate, then secure it to the wall. Thread cable through the cover plate and click in place. Thread cable through the back grommet of rain sensor wiring cover.

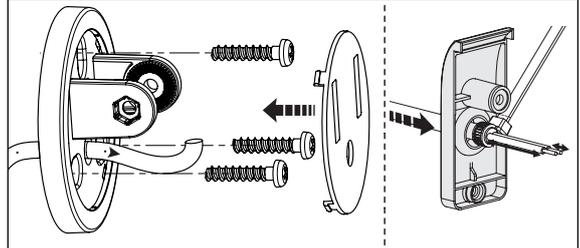


**3** Wire into green terminal. LIVE in to slot 1 & NEUTRAL into slot 2

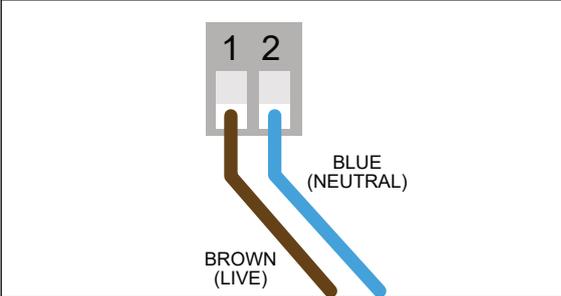

**4** Attach wiring cover to the rain sensor. Fit rain sensor to the wall mounting plate.

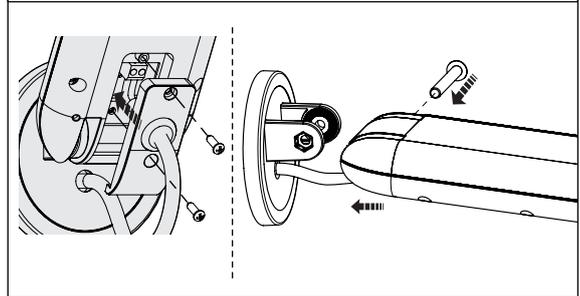

**5** Check amber LED lights up when power is turned on. If not, remove cover and press "B" button button, LED should flash red

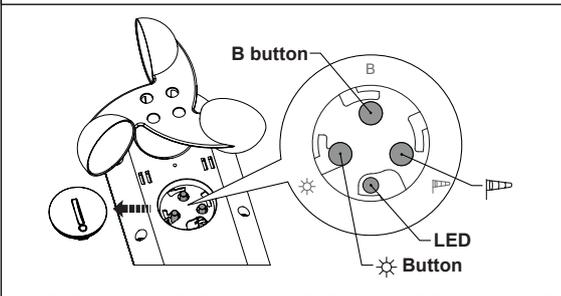

① **TECHNICAL SUPPORT:** For any technical information/queries please contact your supplier.

The manufacturer operates a policy of continuous product improvement, and reserves the right to alter specifications at any time without notice. Every effort has been taken to ensure all details contained in this document are correct at the time of going to press but this document should be used only as a guide and does not in any way form part of a contract or warranty. It is the customer's responsibility to ensure that the product is suitable for the actual conditions of use, which are beyond the control of the manufacturer.