


Brewer Ultimate Flue Outlet Square Model

Fitting Instructions

- Helps prevent debris, bird and vermin entry
- Suitable for live or unused chimneys
- Solid fuel model with larger mesh to BSEN1856-1:2009
- Also suitable for oil appliances
- Available painted terracotta, buff or black
- Stainless steel models available
- Fits 150-250mm (6-10") internal pot sizes
- Simple, fast and secure fitting
- Other sizes plus square and special shapes, made to order

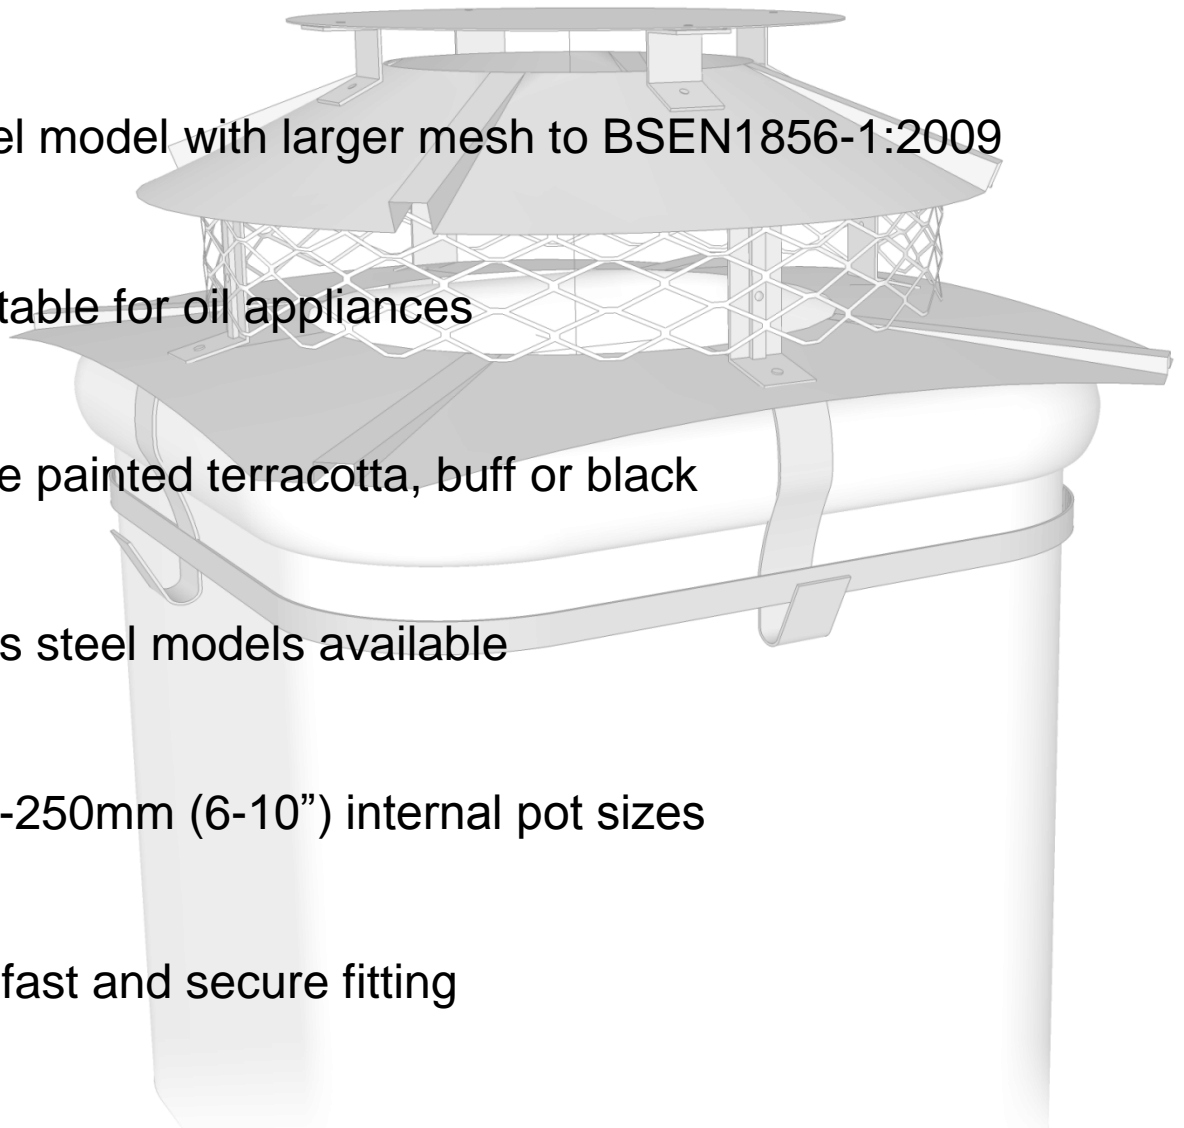

Fitting Instructions for Gas Use

Important: ensure you have the correct terminal to match your fuel type and application

Fig1

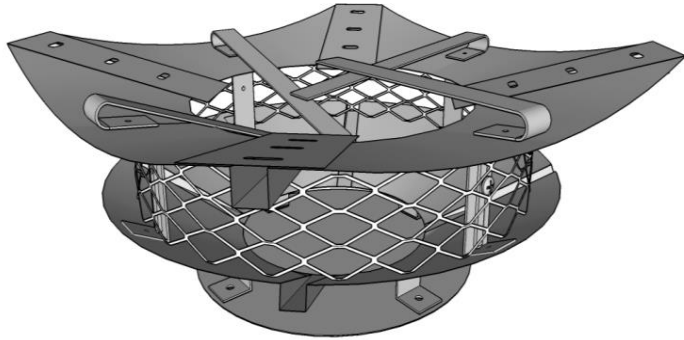


Fig 2

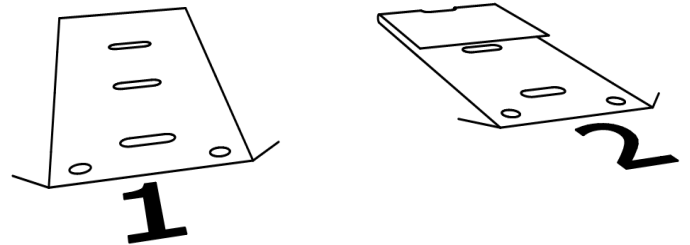


Fig 3


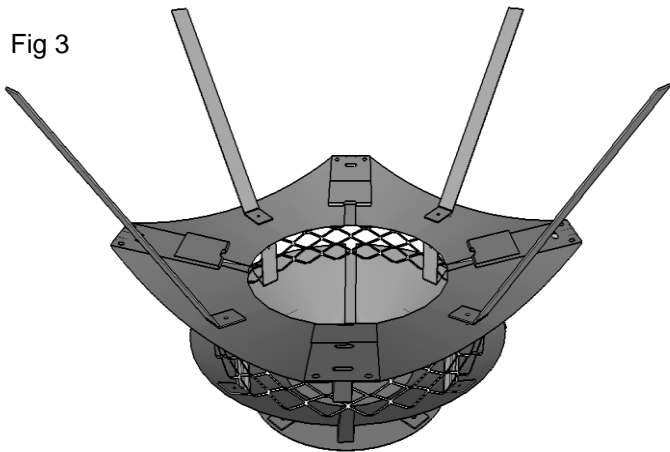


Fig 4

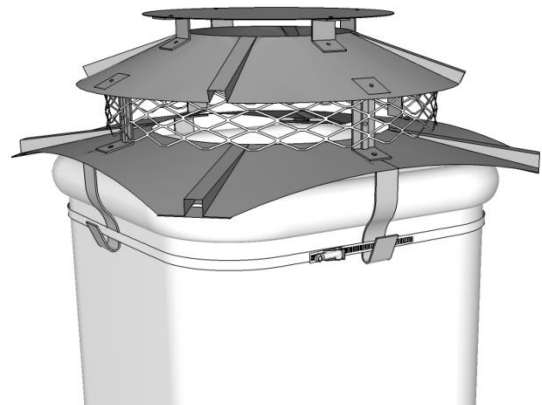

To fit the UFO for gas and oil use:

1. Lay the unit upside down. Bend the legs outwards and bend all four mounting tabs in the sequence shown (figs 1, 2 and 3).
2. Position the unit centrally and squarely on the chimney pot.
3. Bend the legs down the outside face of the chimney.
4. Position the stainless steel band approximately 50mm (2") above the lower edge of the legs.
5. Bend the bottom of legs back upwards over the stainless steel band and trim if necessary. (Fig4)

Important:

The UFO must not be fitted without correctly bending the tabs. This ensures the flue area is unobstructed.

Never install the unit with the top of the chimney or any other object positioned inside the central area of the terminal assembly. This area must be kept clear to allow products of combustion to escape (fig 11).

Fitting Instructions for Solid Fuel And Oil Use

Important: ensure you have the correct terminal to match your fuel type and application

Fig 5

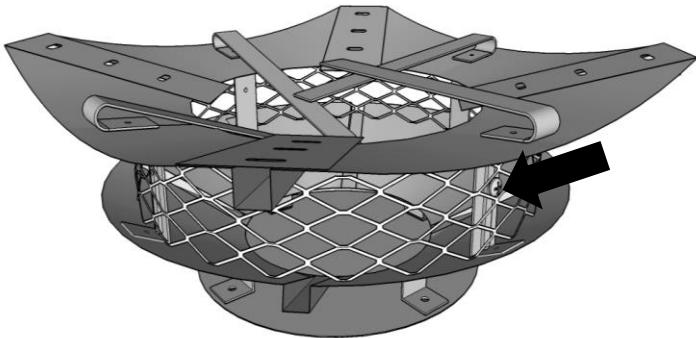


Fig 6

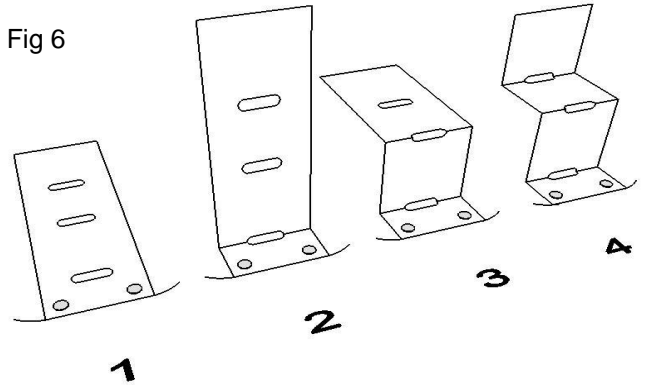


Fig 7

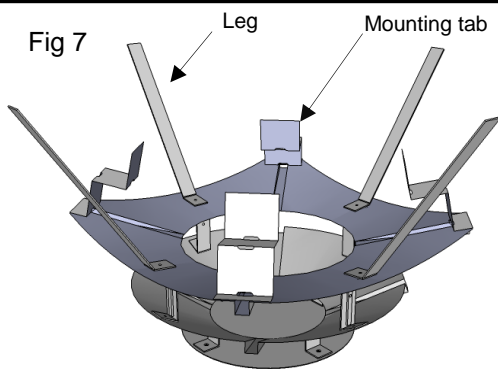


Fig 8

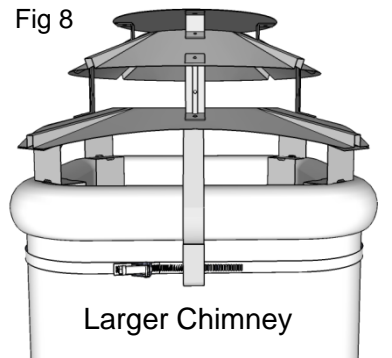


Fig 9

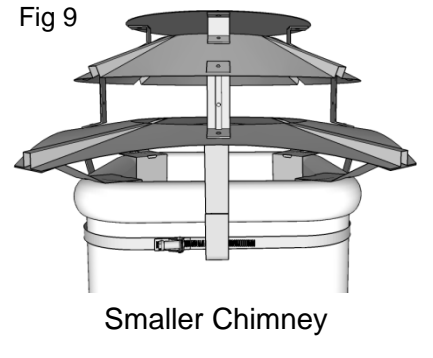


Fig 10


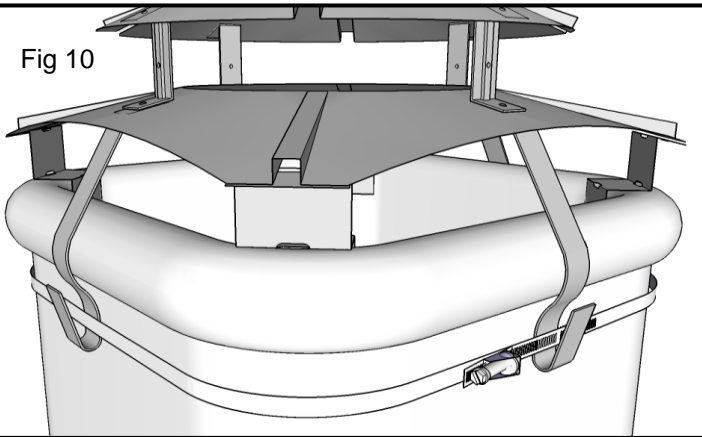


Fig 11

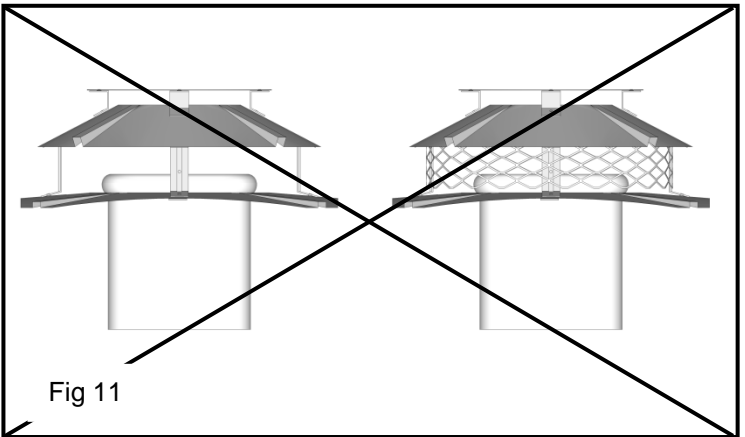

To fit the UFO for solid fuel and oil:

1. Lay the unit upside down and remove the Phillips screw (arrowed) and birdguard mesh (fig 5).
2. Bend the legs outwards and bend all four mounting tabs in the sequence shown to create upstands (figs 6 and 7).
3. The unit can now be fitted ensuring only the upstands touch the top face of the chimney (figs 8 and 9).
4. With further bending of the tabs/upstands, ensure the unit is central, and the tabs fit snugly down the inside face of the chimney.
5. Bend the legs down the outside face of the chimney.
6. Position the stainless steel band approximately 50mm (2") above the lower edge of the legs.
7. Tighten the stainless steel band with a flat bladed screwdriver.
8. Bend the bottom of legs back upwards over the stainless steel band and trim if necessary. (Fig10)

Important: the UFO must not be fitted without correctly bending the tabs and removing the gas mesh. This ensures the flue area is unobstructed.

Never install the unit with the top of the chimney or any other object positioned inside the central area of the terminal assembly. This area must be kept clear to allow products of combustion to escape (fig 11).

Declaration of conformity

<p>Brewer Metalcraft Ltd Units C&D Ford Lane Industrial Estate Ford (Near Arundel) West Sussex BN18 0DF United Kingdom</p> <p>13</p>	
1856-1:2009 Chimneys - Requirements for metal chimneys - Part 1: System chimney products	
Metal system chimney fitting - Terminal	
Essential Characteristic	Performance
Flow resistance Coefficient	ζ 0.049
Durability: Freeze thaw	Pass

Technical information

Model	Ultimate Flue Outlet
Fitting range (internal chimney diameter)	150-250mm
Coefficient of flow resistance	ζ 0.049

