



Established 1906

WT KNOWLES & SONS LIMITED

Fitting Instructions

Gas Terminal

Code No: KNO180 & KNO205

W T Knowles & Sons Limited

Ash Grove Pipe Works


Elland

West Yorkshire

HX5 9JA

www.wtknowles.co.uk

July 2018: Issue 1

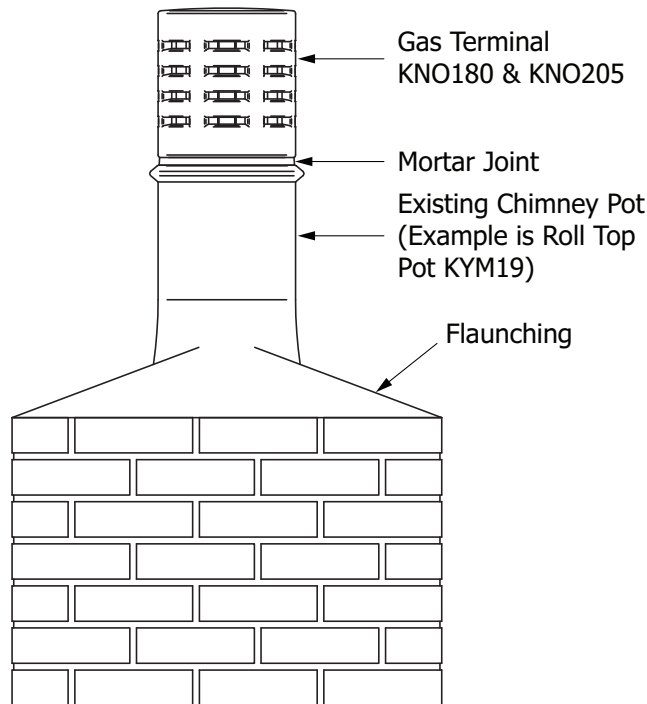

Instructions

- Inspect existing chimney for cracks and ensure the inside of the chimney pot is clear and free from debris.
- Check that the cement flaunching is sound and the pot is fully secure
- Clean the inside of the top of the pot and the joint face of the pot.
- Inspect the terminal. Confirm it is undamaged and ensure all surfaces are clean and free of debris.
- Mix the mortar with brick coloured dye and apply a bead of mortar to the top of the face of the pot.
- Carefully insert the spigot into the pot and lightly press down onto the mortar joint.
- Align the terminal vertical and trim off excess mortar. Ensure the mortar is smooth and tapered out, to allow rain to run down the outside of the chimney pot.

