

Installation Do's & Don'ts

01 Storage / Packaging



Keep rolls in original packaging.



Keep the rolls upright away from direct sunlight.



Don't stack pallets on top of each other.



Don't stack them lying on a pallet or ground.



02 Power



Only plug in one electrical appliance at a time.



Don't overload the transformer.



03 Heat gun temperature



Hot weather



Cold weather



04 Primer application



Only apply required amount of primer. Apply primer in only +5°C and over and in dry conditions.



Don't over prime the surface.



05 Laying membrane



Lay the membrane in place.



Don't score the PE film to roll.



Pull the PE film from the side, while brushing sideways.



Don't remove the PE film while rolling the membrane.



06 Brushing




Brush side to side after laying the membrane.



Don't brush straight in the middle.




07 Minimum 50mm overlap

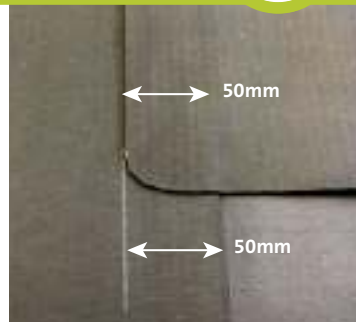

08 Patches



Minimum 200mm for patches

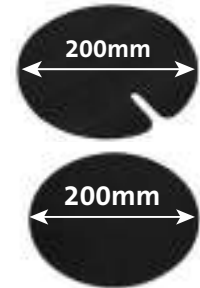

09 Nozzle



40mm nozzle.



Don't use 20mm nozzle.



10 Visible bleed



2mm visible bleed.



No bleed indicates bad weld.



CARLISLE®
Construction Materials Ltd.

United Kingdom

Lancaster House | Concorde Way
Millennium Business Park | Mansfield
Nottinghamshire | NG19 7DW

T +44 (0)1623 62 72 85
F +44 (0)1623 65 27 41
E info.uk@ccm-europe.com

VISIT US ON:



www.ccm-europe.com