


Laying Membrane

Step by step guide on laying our Techno EDPM Membrane to your next rubber roofing project.


1

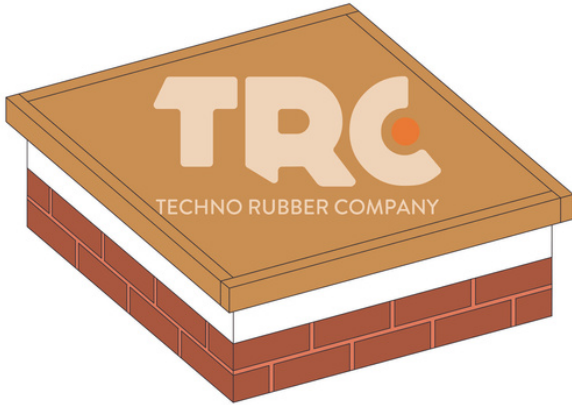

Step 1

Ensure deck is dry and clean.


2

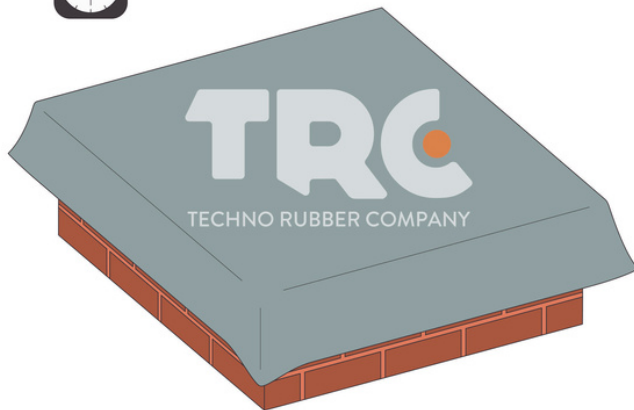

Step 2

Position membrane on the roof and allow to relax for 30-45 minutes, slightly longer in colder temperatures.


3

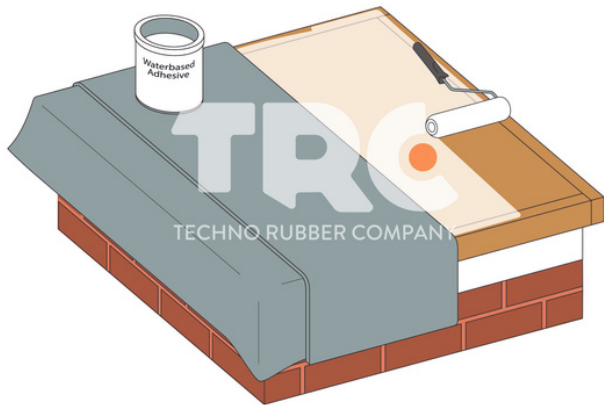

Step 3

Fold back one half of the rubber and apply an even coat of water-based adhesive to the deck using roller and sleeve. For best results, it is essential that the water based deck adhesive is thoroughly stirred with a paddle stirrer prior to use.


4

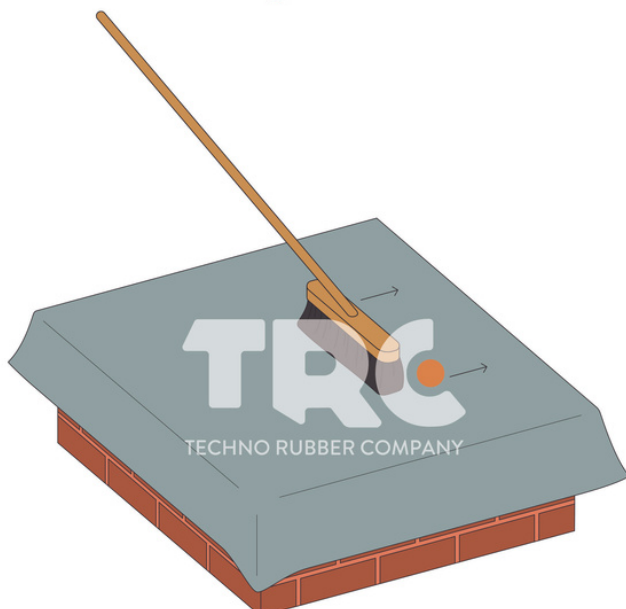

Step 4

Mate the rubber to the adhesive immediately and use a soft broom to sweep out any air bubbles.


5

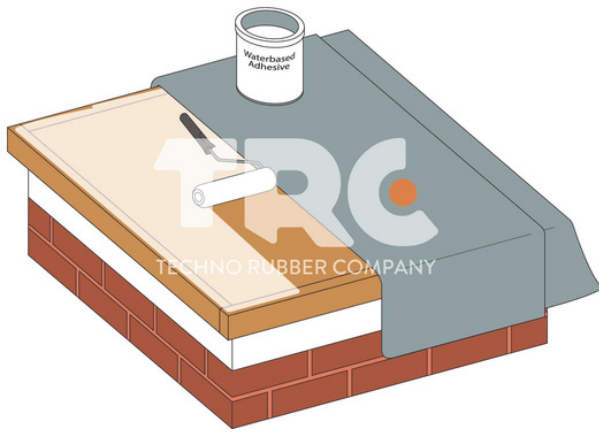

Step 5

Repeat the process for the other side

6

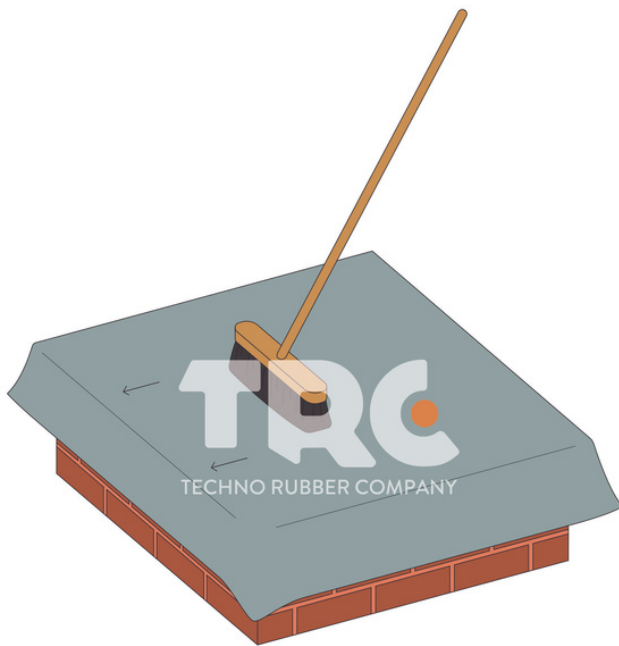

Step 6

Thoroughly sweep roof.